



 
4G Solar Lighting Camera

Quick Operation Guide


*Product specifications and images are for reference only and may vary from the actual product. We reserve the right to make changes without prior notice.

Packing List


After opening the product package, please confirm whether the camera is in good condition and whether all the accessories are complete




Lamp post bracket

 

Toolkit

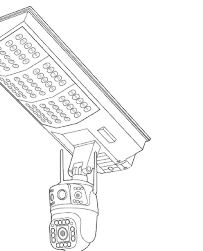

lighting camera


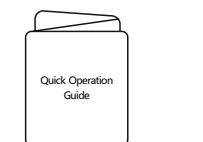


Instruction Manual

Camera Instructions

Introduction To Indicator Lights

- The red light is always on. The equipment is starting up
- The red light flashes slowly Network access
- The blue light flashes slowly Low battery power

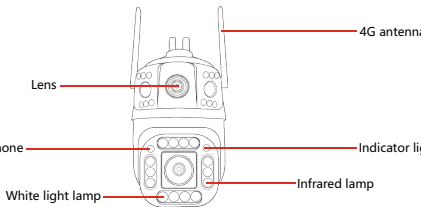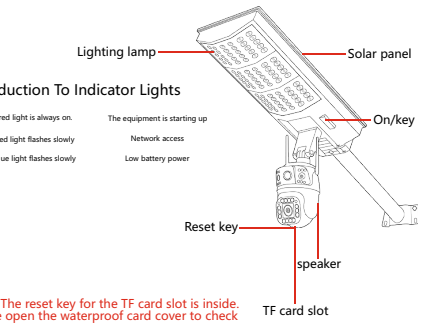

Note: The reset key for the TF card slot is inside. Please open the waterproof card cover to check


Please pay attention to the waterproof sealing ring when reinstalling. Long press and hold the reset key to restore the camera to factory Settings

APP Download and Installation

Download the **Cofe Online** App by Either Using the QR Code or by Searching in Playstore or App Store Respectively



Scan The QR Code To Download

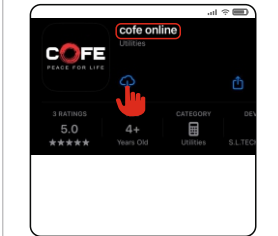

[iOS System]




[Android System]

(4G Camera) Network Connection

Figure 1: Smart Device screen showing the "+" button to add a device.

Figure 2: Add Device screen showing the "4G Camera" option.

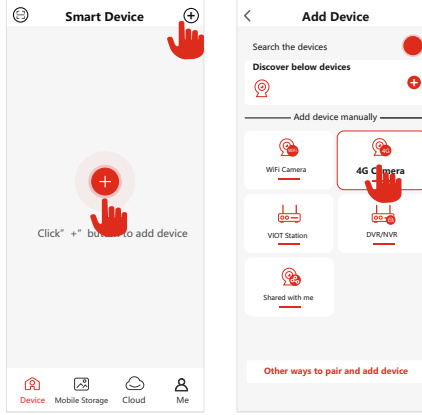


STEP 3 Confirm the Configuration Result

After the configuration is completed, the device will be displayed on the device list interface. Clicking on it will open the real-time preview screen and allow you to perform related operations and Settings.

Scanning Guide


Scan the QR code on the camera body label according to the steps on the application interface (Figure 3)

After the scanning is completed, click "Add Device" (Figure 4)

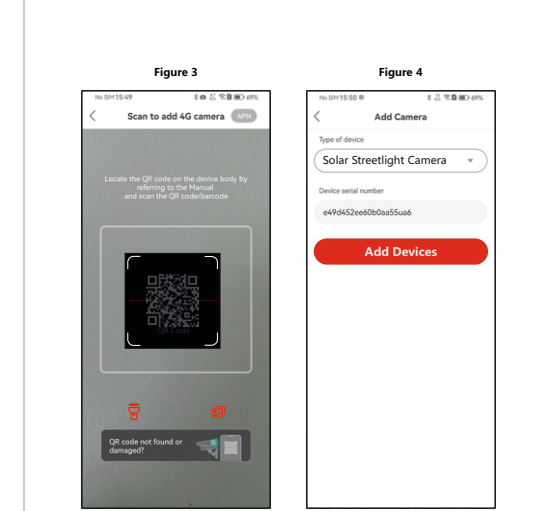

Lighting Settings

- Click "Settings - Lighting Settings" to enter the Settings interface. (As shown in Figure 5)
- Turn on the lighting switch and select the lighting time period. (As shown in Figure 6)
- Different brightness levels can be selected according to the application scenarios of the camera. (Note: The higher the brightness, the faster the power consumption.)

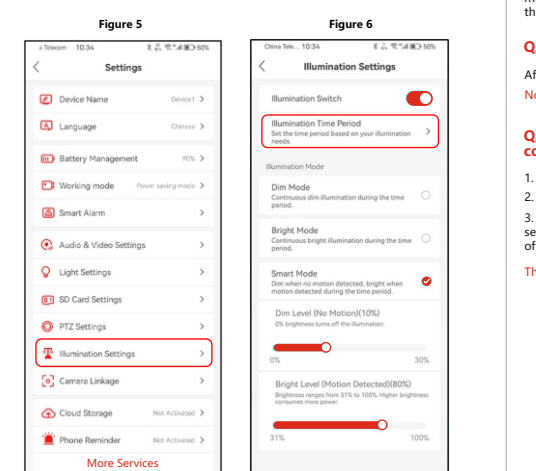

Frequently Asked Questions

- Q. How do cameras store videos?**
- Local TF card storage, with a maximum support of 256G. When the TF card is full, the earlier video loop recordings will be automatically deleted.
 - Cloud storage (When the device detects a person wandering around, it automatically generates a short video and uploads it to the cloud for storage, and pushes it to the mobile phone APP. It cannot be stolen or damaged. Even if the device is disconnected, the alarm video can still be viewed.)
- Q. Forgot device access password How should we handle it?**
- After restoring the device to factory Settings, reconnect it and set a new access password
- Note: Access passwords involve privacy and security. Please handle them with caution
- Q. How to deal with the situation where the camera fails to connect or goes offline abnormally during use?**
- Check whether the power supply of the camera and the router network are normal.
 - Unplug and plug the power supply of the camera and restart the camera.
 - Restore the camera to factory Settings (press and hold the Reset button for about 6 seconds until you hear the prompt sound "Restoring to factory Settings, do not power off" and then release it), and then add the device again according to the instructions.
- The position of the eset key is detailed in the "Appearance Introduction" section

Attention

Please change your user password while using this product to prevent it from being stolen by lawbreakers.

Do not install the device in damp, dusty places that are easily accessible to children

Please use and store within the allowable temperature and humidity range. Do not disassemble the equipment at will.

Special Statement

The product is subject to the actual item. The manual is for reference only

The firmware of the APP and product devices will be updated from time to time. If you need to upgrade, please do it online by yourself. No further notice will be given. The manual is for reference only.

The manual may contain technical inaccuracies, inconsistencies with product functions, or printing errors. Please refer to the final interpretation of our company.

This product is suitable for service scenarios such as family guardianship, elderly care, child care, pet care, and daily home anti-theft. Please do not use the device for illegal purposes. Any legal risks arising therefrom will be borne by the user themselves!

Product Warranty Card

Product Name		Model	
Purchase Date		Dealer	
Cause Of Failure			
Fault Handling Situation			
Customer's Name		Gender	
Contact Number		Postal Code	
Contact Address			

Warranty period: One year; This warranty card is applicable to the series of products of our company that you purchase.